


Update your Condor Mini to version V5.01 and follow our guide to cut keys for the new VAG locks.


- Step 1** Select Cut By Bitting on the Main Menu and then enter the key reference HU162T-9




- Step 2** Tap “Confirm”, select the key type and then (1)tap “Key Decode” to decode your customer’s key as shown below. (2) Alternatively, if you already know the height of the 9 bittings, simply enter them and proceed to cut the key. Follow the on-screen instructions to cut the key.

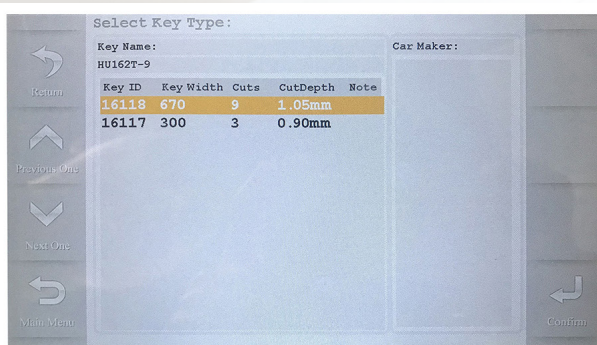

**2** Alternatively, if you already know the height of the 9 bittings, simply enter them and proceed to cut the key

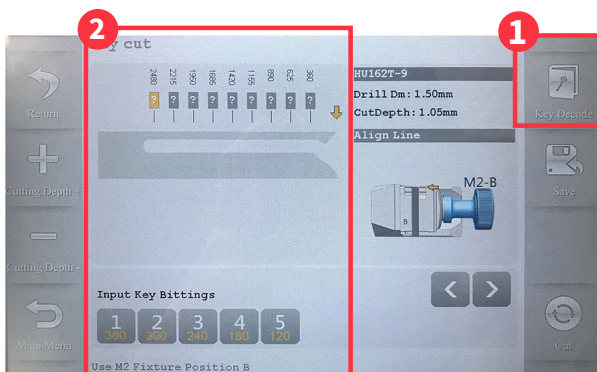




**1** Tap “Key Decode” to decode your customer’s key

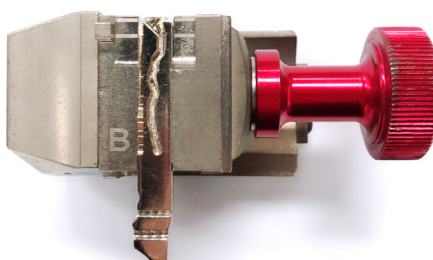



- **Step 3** After you have successfully cut the horizontal cuts, go back to “Select Key Type” and proceed to decode the three vertical cuts remaining or enter the height of the bittings if you know them.

Switch to position D of the M2 Jaw and use a key blank to hold the key you are cutting in position as shown in the images below. Follow the on-screen instructions to cut the key.

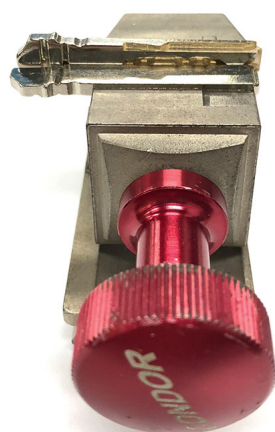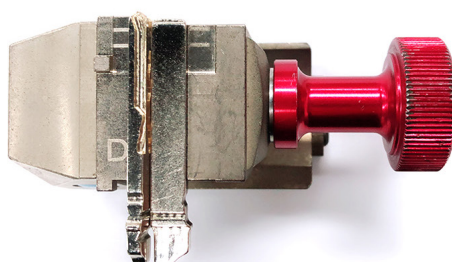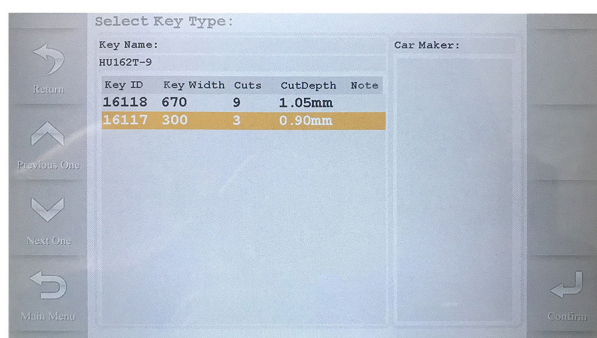

**Click here to see the Xhorse CONDOR MINI in action on our website**